

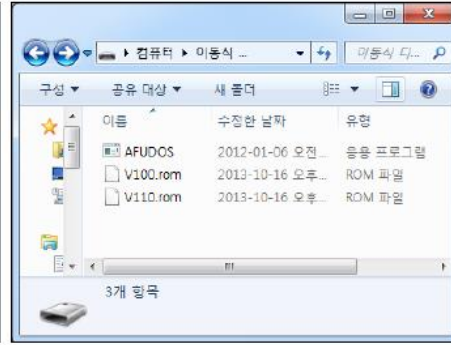
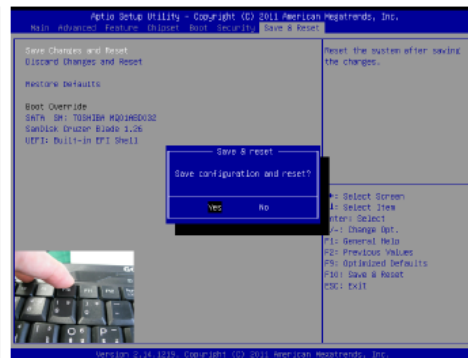


## 1. Prepare BIOS File and Utility

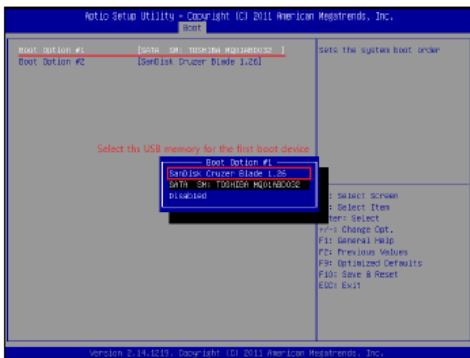

- 1) Prepare the USB memory.
- 2) Store the BIOS file and utility file in USB memory.
- 3) Insert the USB memory to POS system.
- 4) Turn on the POS and Press "DEL" key for entering BIOS.

## 2. Changing BIOS Value and Reboot

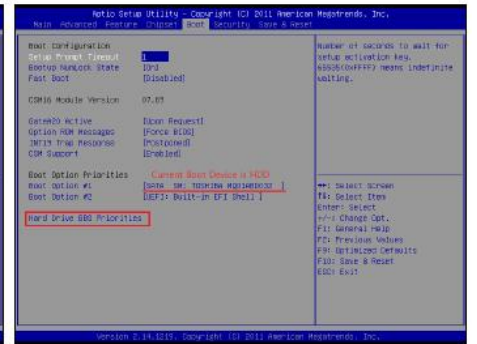


- 1) Change the "Flash Write Protect" value to "Disabled".
- 2) Change the boot priority from HDD to USB
- 3) Press "F10" key for save and exit.

### 3. BIOS Download



- 1) After rebooting via USB memory, It shows the DOS display.
- 2) Input "AFUDOS V100.ROM /P /B /N /X" and Press "Enter" key for Download
- 3) It will take 2~3 minute.
- 4) Turn off the POS using Power Button.

### 4. BIOS Default and Save

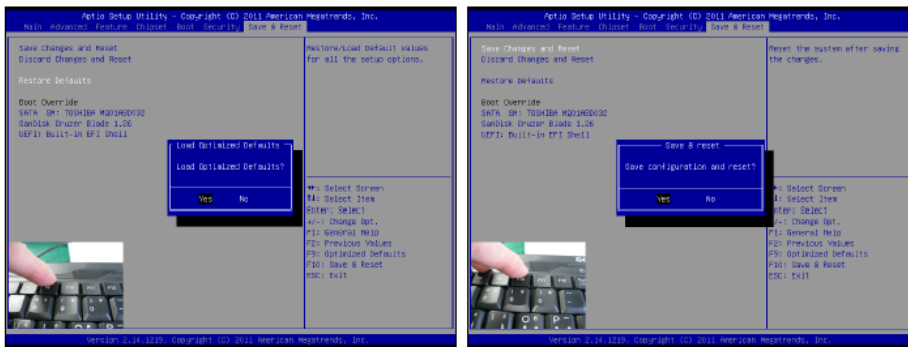

[DEFAULT]

[SAVE]

- 1) Turn on the POS and Press "DEL" key for entering BIOS.
- 2) Press "F9" for BIOS default.
- 3) Press "F10" for Save and exit.

### 5. Check Result

